



Setup Guide for:


U-PROX Readers via U-Prox app

Rev 1.0


Page 1 of 3

Initial Steps:


- Download U-Prox Config & U-Prox ID from Apple App Store or Google Play
- Short Data 0 (Green) & Data 1 (White) *Initial Setup Only*
- Power the reader
- Open U-Prox Config and search for the reader (you will need to be close)

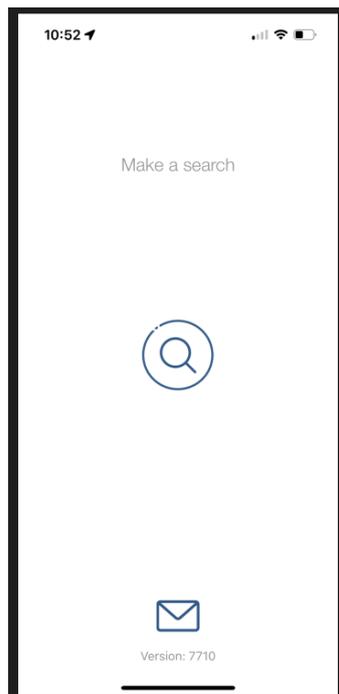

- Select the reader once it is found and tap on the plug icon

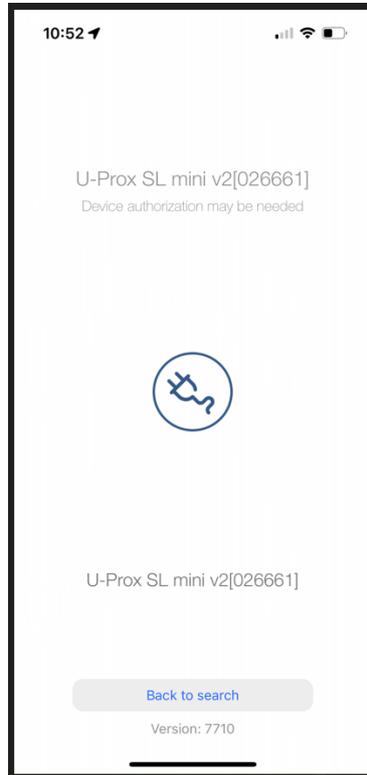

- Go to "SETTINGS"

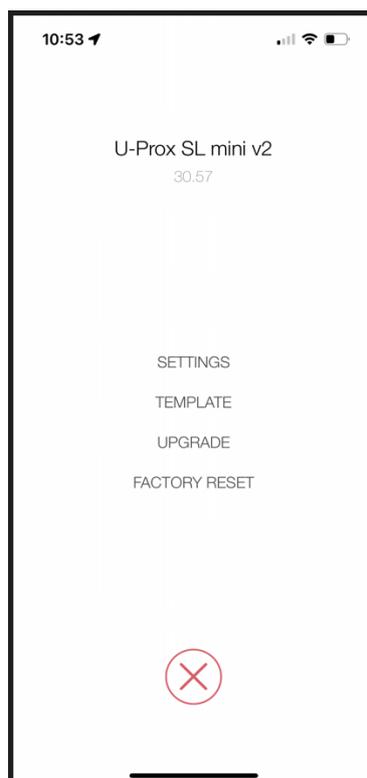

From here you will be able to:

- Load the profile that allows the reader to communicate with the U-Prox ID App (Please note profile 1359 must appear behind serial number)
Follow this [guide](#) to load the profile if using U-Prox ID
- Set an Installer code so the reader can be accessed without shorting D0 & D1
- Set the reader format to the required setting for specific cards/tags
- Adjust the Wiegand output as needed *Our guides are for Wiegand 26 bit*
- Once settings have been changed, select “Back” to navigate to the previous screen and select “SAVE TO DEVICE”

